



## **Instruction Manual**

# **P50 Professional Carpet & Spray Extractor**



<b>Model</b>	V-P50
<b>Rated Voltage (V)</b>	220-240 V
<b>Rated Frequency (Hz)</b>	50/60 Hz
<b>Rated Power (W)</b>	1200 Watts

- Please read this Instruction Manual carefully before operation and follow all guidelines before using this machine.
- Please keep this Manual for future reference.

# **TABLE OF CONTENTS**

<b>SAFETY INSTRUCTIONS .....</b>	<b>2</b>
<b>COMPONENTS .....</b>	<b>3</b>
<b>USING THE EXTRACTOR &amp; CLEANING TIPS.....</b>	<b>4</b>
<b>CLEANING PRODUCTS &amp; CLEANING PROCESS.....</b>	<b>6</b>
<b>CONDITIONS OF WARRANTY .....</b>	<b>7</b>

## **SAFETY INSTRUCTIONS**


When using an electrical appliance, basic precaution should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

***WARNING: To reduce the risk of fire, electric shock, or injury:***









1. The device must be unplugged after use and before any cleaning and maintenance of the machine.
2. Do not use the machine if there are any noticeable irregularities in its functioning. Do not use the device if any parts or components (such as nozzles, tubes, filters, etc.) are damaged. Do not use the machine if the power cord is damaged. In this case, the power cord must be replaced by a trained professional.
3. Do not use the machine to vacuum flammable or combustible materials and hot or burning items. This machine is designed to vacuum water. Do not use the device for dry vacuuming without mounting a special dust bag first!
4. While using the machine, take special care when there are children nearby. Do not place any suction end of the machine near people, especially children. The strong suction can cause harm!
5. Replace the filters when there is a noticeable pressure drop and cleaning the filters has no effect.
6. Each time after working, empty, clean and dry out your machine. Do not store the device while it is wet.
7. Make sure there is water in the clean water tank while the machine is on! Do not let the pump run dry for any period of time! The water in the clean tank should not be hot, as it is used to cool the pump while it is functioning.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## COMPONENTS

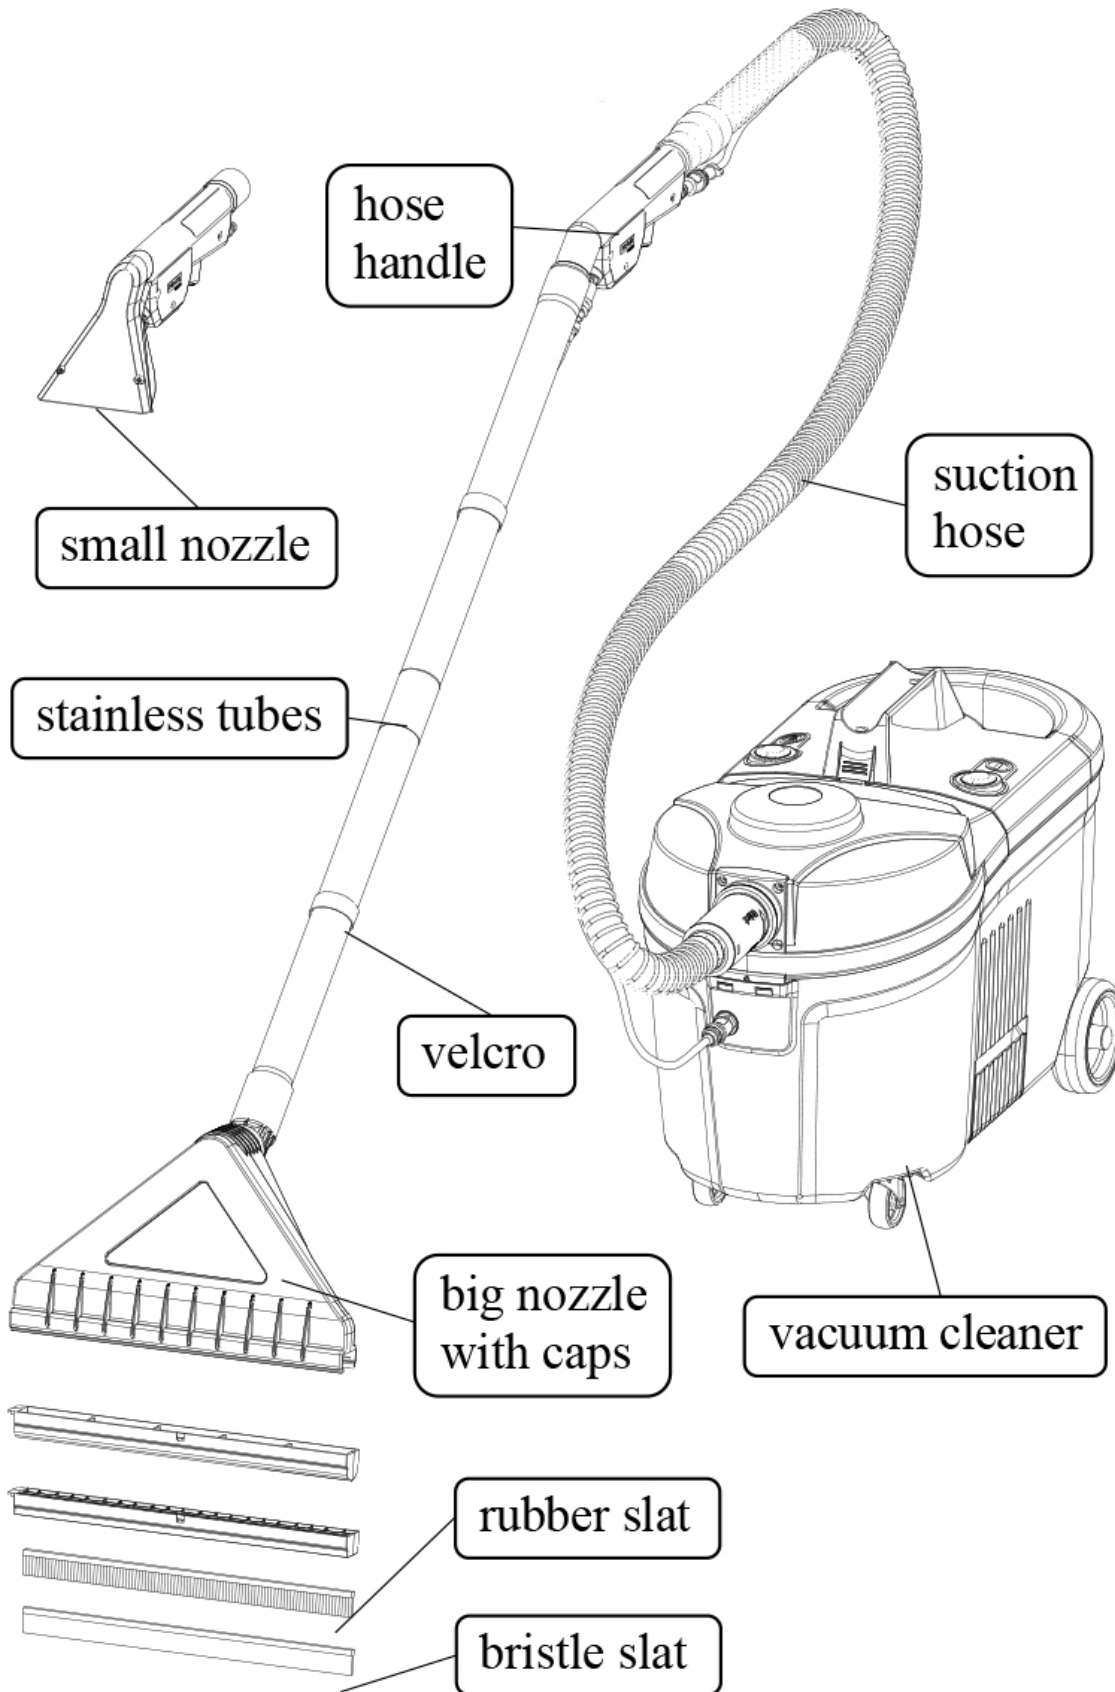

# USING THE EXTRACTOR & CLEANING TIPS



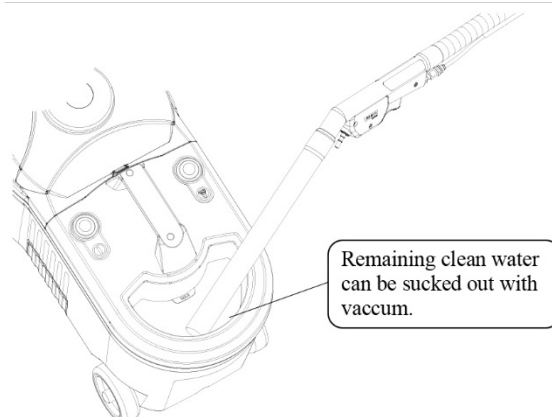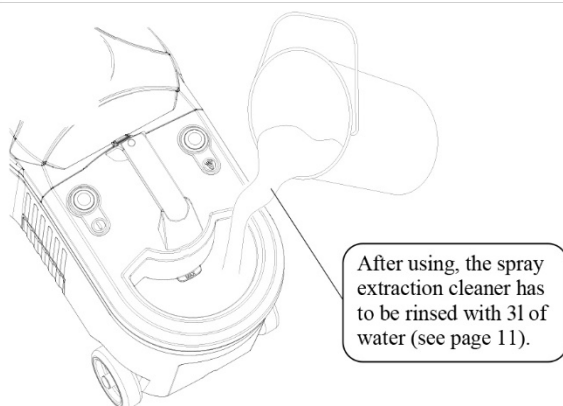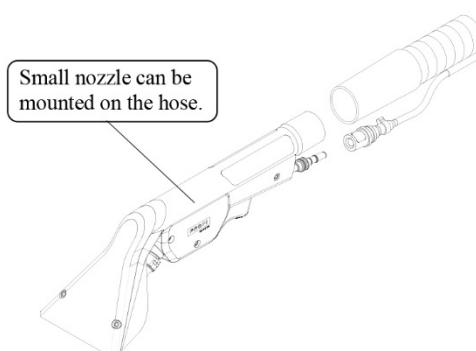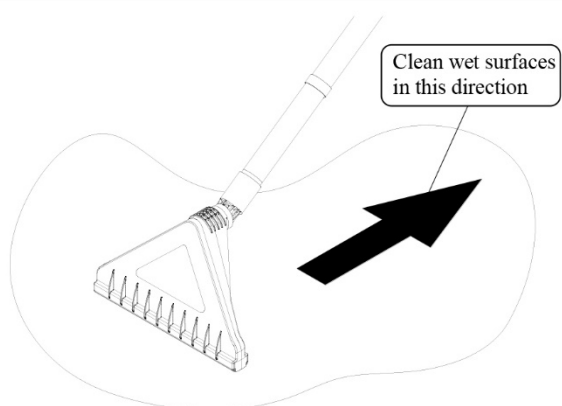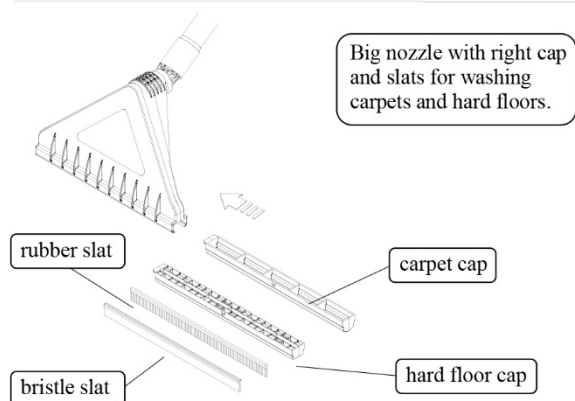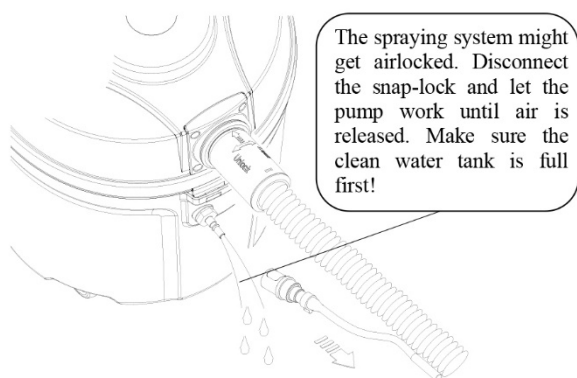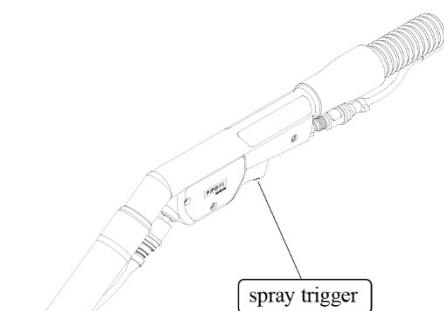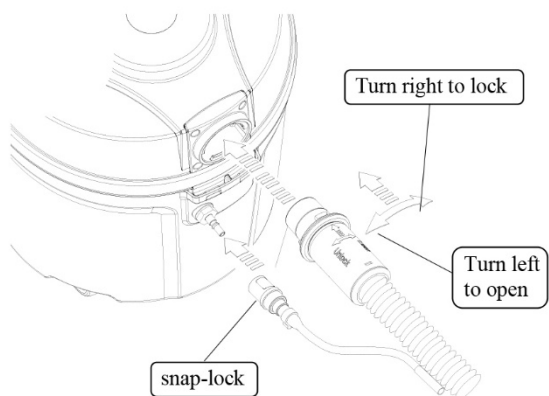

# **CLEANING PRODUCTS & CLEANING PROCESS**

It is recommended to use the P50 extractor with cleaning products for carpet cleaners as well as an anti-foaming agent. Always use environmentally friendly products and never use more than necessary in order to protect the natural environment.

- Each cleaning product should be used as instructed by its manufacturer.
- Always dry-vacuum the surfaces, carpets, furniture, before washing.
- Before washing carpets, rugs and especially real oriental or Persian carpets, always test the effect of water and your cleaning products on a small inconspicuous piece of its fabric.
- Cleaning products might be dissolved in warm, but not hot water. Do not use water over 50°C to avoid damaging the water pump!
- Standard spray extraction method is:
  - Turn on your device in this order: first “motor” and then “water pump”.
  - Extend the nozzle as far as you can reach and place it on a surface you are cleaning.
  - Pull the spraying trigger and hold.
  - In a smooth motion swipe the nozzle across the cleaned surface back towards yourself. Water with cleaning product will be sprayed out and sucked back in with gathered dirt.
  - Release the trigger before finishing your swipe. Make sure all the excess fluid is sucked in.
  - Repeat in parallel, overlapping lines until the surface is clean. While cleaning, move backwards.
- Use the big nozzle with proper tips to clean floors and carpets.
- Use the small nozzle to clean upholstery, stairs and vertical surfaces.
- Use amount of cleaning product and avoid drenching of delicate fabrics.
- Heavily stained or dirtied surfaces can be sprayed 15 minutes prior to sucking the dirty water back in.
- Repeat the cleaning process with clean water to further improve the effectiveness. This method reduces cleaning product residue in fabrics and better rinses the dissolved dirt.
- Wash surfaces in rooms starting from windows and move backwards towards doors.
- After washing fabrics, impregnate them to reduce the rate of gathering dust and dirt.
- When cleaning carpets that were shampooed earlier, use the anti-foam product in the dirty water tank.
- After using your P50 extractor machine and emptying of both water containers (clean and dirty), the appliance has to be thoroughly rinsed following these steps:
  - Pour 3 Litres of clean, lukewarm water into the clean water tank.
  - Place the nozzle where water can be safely sprayed out (bath, toilet, bucket, etc.).
  - Turn on the pump, and hold the trigger until all of the water is sprayed out.
  - It is an important maintenance procedure. Remaining cleaning products residue could damage the pump if not rinsed properly.



**Cleanstar Pty Ltd**

**ABN: 51 121 002 104      ACN: 121 002 104**

**59 Radford Road, Reservoir VICTORIA 3073**

**Phone: (03) 9460 5655      Fax: (03) 9460 5666**

**Email: [sales@cleanstar.com.au](mailto:sales@cleanstar.com.au)      Web: [www.cleanstar.com.au](http://www.cleanstar.com.au)**

## **CONDITIONS OF WARRANTY**

**This document outlines the terms and conditions of warranty for your Cleanstar product. This is an important document that should be kept with your proof of purchase documents in a safe place for future reference should you require service for your product.**

Thank you for purchasing your new Cleanstar product. We are confident this product will give you trouble-free use and excellent service, provided the operator uses and maintains the product in accordance with the Instruction Manual. Please read the Instruction Manual carefully before using the product for correct operation and maintenance procedures, and store it in a safe place for future reference.

1. This is a parts and labour warranty against faulty or defective parts, materials or workmanship in manufacturing, when the product is used and operated in accordance with the Instruction Manual.
2. This product carries a 12 month (1 year) warranty period that commences from the original date of purchase by the first user/purchaser, and is not transferable.
3. This warranty only applies to products purchased and used in Australia.
4. At all times during the warranty period, Cleanstar shall, at its sole discretion, determine whether repair, replacement or refund will apply if the product has a valid warranty claim applicable to it.
5. The repair or replacement of the product under this warranty does not extend the original period of warranty.
6. Please note that this warranty will be voided in the following cases (which are not exhaustive) and the warranty does not apply to the cost of replacing any parts of the product resulting from:
  - Accidental damage;
  - Normal wear and tear;
  - Neglect, misuse or physical abuse by the operator, including failure to properly maintain or service;
  - Any alterations, modifications or tampering with the product without the prior written consent of Cleanstar;
  - Incomplete or improper installation;
  - Incorrect, improper or inappropriate operation;
  - Insect or vermin infestation;
  - Power surges, electrical storm damage or incorrect power supply/voltage;
  - Excessive use or use for which this product has not been designed;
  - Vacuuming up water, liquids, toner, powders, glass, hazardous, flammable or corrosive materials, plaster dust, concrete dust and other similar building or construction materials;

- Failure to comply with the operating instructions contained in the Manual supplied with the product;
  - If the product is rented;
  - If the product is used outside of Australia;
  - If the product was serviced or repaired by anyone other than Cleanstar, or one of Cleanstar's Authorised Service Agents (ASA). Cleanstar is unable to accept any responsibility under this warranty for any repair work not carried out by an ASA or from the use of non-genuine parts.
7. This warranty does not cover service calls, travelling time or consumable parts such as belts, dust bags, filters, hose or hose parts, rods and wands, floor tools and accessories, motor brushes and other like consumable items, unless defective in manufacture. In order to prolong the life of accessories and consumables, regular care and maintenance is recommended.
  8. Please retain your original proof of purchase which will be required before you can make a claim under this warranty. If proof of purchase can not be provided at the time of a warranty claim or service, any work carried out on the cleaner is chargeable.
  9. Any transportation and delivery costs involved in the repair of defective parts shall be borne by the claimant. In all instances, unless the product is transported by Cleanstar or a Cleanstar authorised representative, the product is transported at the owner's cost and risk while in transit to and from Cleanstar or its ASA.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits conferred by this warranty are in addition to other rights and remedies under law in respect of the product to which this warranty relates.

**TO INQUIRE ABOUT MAKING A CLAIM UNDER THIS WARRANTY, PLEASE FOLLOW THESE STEPS:**

- a) carefully check the Instruction Manual and the terms of this warranty;
- b) have the name and model number of the appliance available;
- c) have the proof of purchase available (ie. invoice, receipt, etc) showing where the appliance was purchased from and date of purchase;
- d) call Cleanstar on **(03) 9460 5655** to speak to one of our customer service staff.