



430MDK / 800MDK • XPOWER Cage Dryers Multi Dry Kit

The Kit includes:

- (A) Blower/Fan Adapter (1)
- (B) 8 Foot Hoses (3)
- (C) Airflow Adjustment Doors (3)
- (D) Hose Clamps (6)




- 1) Clamp Blower Fan Adapter (A) to front of the dryer. Make sure locking snap buckles on the side of the Blower Fan Adapter are securely locked.



- 2) Attach each Hose (B) to the Blower Fan Adapter (A) using the Hose Clamps (D). Tighten Hose Clamps (D) with a flat head screwdriver (not included).



- 3) At the other end of each Hose (B), attach the Airflow Adjustment Doors (C) using the remaining Hose Clamps (D).

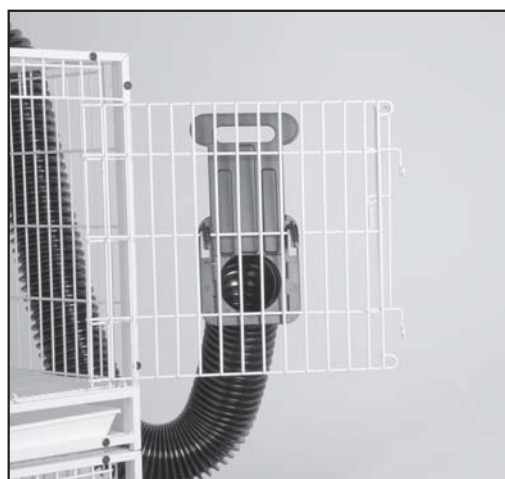

- 4) Use the cage hangers on the Airflow Adjustment Doors (C) to place each Hose on a desired cage.



XPOWER MANUFACTURE, INC. • 220 CLARY AVENUE, SAN GABRIEL, CA 91776

www.xpower.ws

PHONE: (626) 285-3301 • FAX: (626) 285-3302

EMAIL: info@xpower.ws